



Technical Data ThreeBond 3094 UV-curing Resin

Jun. 13, 2017
ThreeBond Co., Ltd.

1. Product description

ThreeBond 3094 is a high-viscosity UV-curing resin that cures under UV radiation having a wavelength of 200 to 400 nm. It has good adhesion to plastics, such as polycarbonate.

Also, it conforms to ISO10993 (biological safety assessment).

Hereinafter, ThreeBond is abbreviated to TB.

2. Features

- (1) High-viscosity type.
- (2) Good adhesion to plastics, such as polycarbonate and acryl.
- (3) Excellent thick film curability by UV curing.
- (4) Curable with UV-LED.
- (5) Conforming to ISO10993 (biological safety assessment).

3. Applications

Bonding of medical devices (injection needle and hub)

4. Properties and characteristics

4.1 Properties

Table 1 Properties of TB3094

Test item	Unit	Result	Test method	Remarks
Appearance	-	Light yellow	3TS-2100-020	Visual inspection
Viscosity	Pa·s	4.6	3TS-2F00-007	25°C, shear rate: 200s ⁻¹
Specific gravity	-	1.07	3TS-2500-002	25°C

4.2 Flow curves

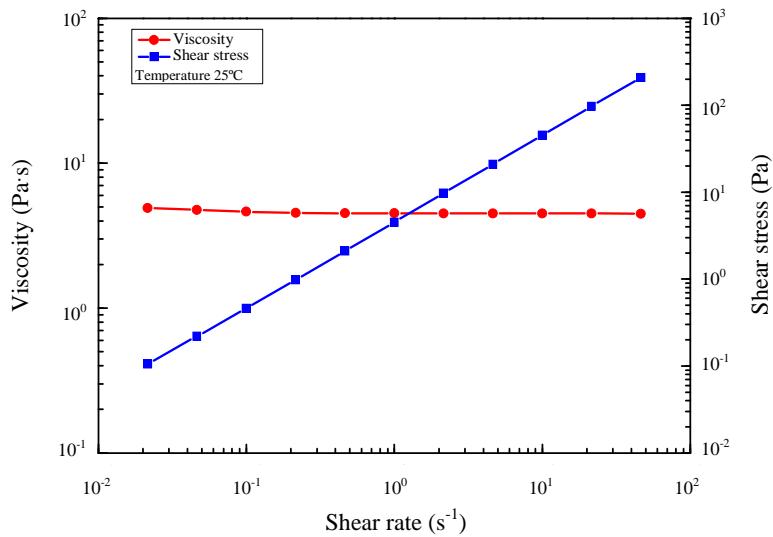


Fig.1 Flow curves of TB3094 (at 25°C)
 Flow curve measuring condition: 25°C
 Measuring device: HAAKE MARS-III Geometry 2°φ35mm

4.3 Temperature-viscosity curve

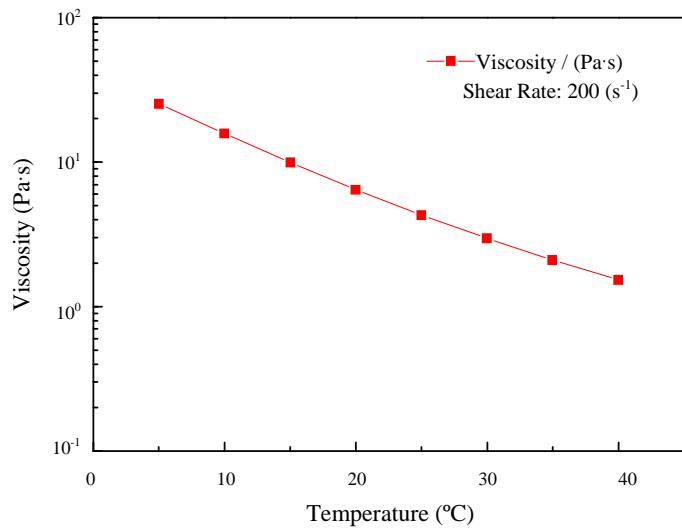


Fig.2 Temperature-viscosity curve of TB3094
 Temperature-viscosity curve measuring condition: Shear rate: 200 (s^{-1})
 Measuring device: HAAKE MARS-III Geometry 2°φ35mm

5. Characteristics

5.1 Characteristics of cured resin

Table 2 Characteristics of TB3094 after curing

Test item	Unit	Result	Test method	Remarks
Thick film curability	mm	3.1	3TS-3160-001	*1
		1.3		*2
Cure shrinkage	%	4.8	3TS-2600-001	φ32, 1.5g *1
Hardness	-	D60	3TS-2B00-004	*1
Water absorption	%	4.9	3TS-2530-003	Boiling for 2 hrs φ32, 1.5g *1

*1 Curing conditions: High-pressure mercury lamp, Dominant wavelength: 365 nm, Irradiation distance: 15 cm, UV dose: 30 kJ/m²

*2 Curing conditions: UV-LED, 300 mW/cm² × 10 sec, Dominant wavelength 365 nm

5.2 Lap shear strength (high-pressure mercury lamp)

Table 3 Lap shear strength of TB3094 to various materials (high-pressure mercury lamp)

Substrate 1	Substrate 2	Unit	Result	Test method	Remarks	
Glass	Glass	MPa	7.9*	3TS-4100-013	-	
	Acryl		6.8*		ACRYPET® VH000	
	PC		7.3*		PANLITE® L-1225Y	
	Glass epoxy		7.6*		KEL-GEF®	
	ABS		6.9*		ABS-N-WN	
	LCP		3.2		VECTRA® E130i	
	Fe		9.0*		JISG3141 (SPCC-SD)	
	Al		5.8*		JISH4000 (A1050P)	
	SUS		6.0*		JISG4305 (SUS304)	
			7.0*		JISG4305 (SUS430)	
PC	PC		8.6*		PANLITE® L-1225Y	
	SUS		9.9*		JISG4305 (SUS304)	
	PP		0.7		-	
	PET		2.7		Rynite® 530	

Curing conditions: High-pressure mercury lamp, Dominant wavelength: 365 nm, Irradiation distance: 15 cm, UV dose: 30 kJ/m²

*Material failure

5.3 Lap shear strength (UV-LED)

Table 4 Lap shear strength of TB3094 to various materials (UV-LED)

Substrate 1	Substrate 2	Unit	Result	Test method	Remarks	
Glass	Glass	MPa	8.2*	3TS-4100-013	-	
	Acryl		6.8*		ACRYPET® VH000	
	PC		7.0*		PANLITE® L-1225Y	
	Glass epoxy		6.5*		KEL-GEF®	
	ABS		7.0*		ABS-N-WN	
	LCP		3.2		VECTRA® E130i	
	Fe		8.9*		JISG3141 (SPCC-SD)	
	Al		4.3*		JISH4000 (A1050P)	
	SUS		8.0*		JISG4305 (SUS304)	
			8.1*		JISG4305 (SUS430)	
PC	PC		6.3*	3TS-4100-013	PANLITE® L-1225Y	
	SUS		10.2*		JISG4305 (SUS304)	
	PP		0.7		-	
	PET		2.4		Rynite® 530	

Curing conditions: UV-LED, 300 mW/cm² × 10 sec, Dominant wavelength 365 nm

*Material failure

5.4 Thermomechanical analysis (TMA)

Table 5 TMA properties of TB3094

Item	Unit	Result	Test method	Remarks
Linear expansion coefficient (α_1)	$\times 10^{-6}/^\circ\text{C}$	79	3TS-4740-001	-60 to -40°C
Linear expansion coefficient (α_2)		199		140 to 160°C
Glass transition temperature	°C	69		TMA method

Curing conditions: High-pressure mercury lamp, Dominant wavelength: 365 nm, Irradiation distance: 15 cm, UV dose: 30 kJ/m² × 2

5.5 Dynamic viscoelastic properties (DMA)

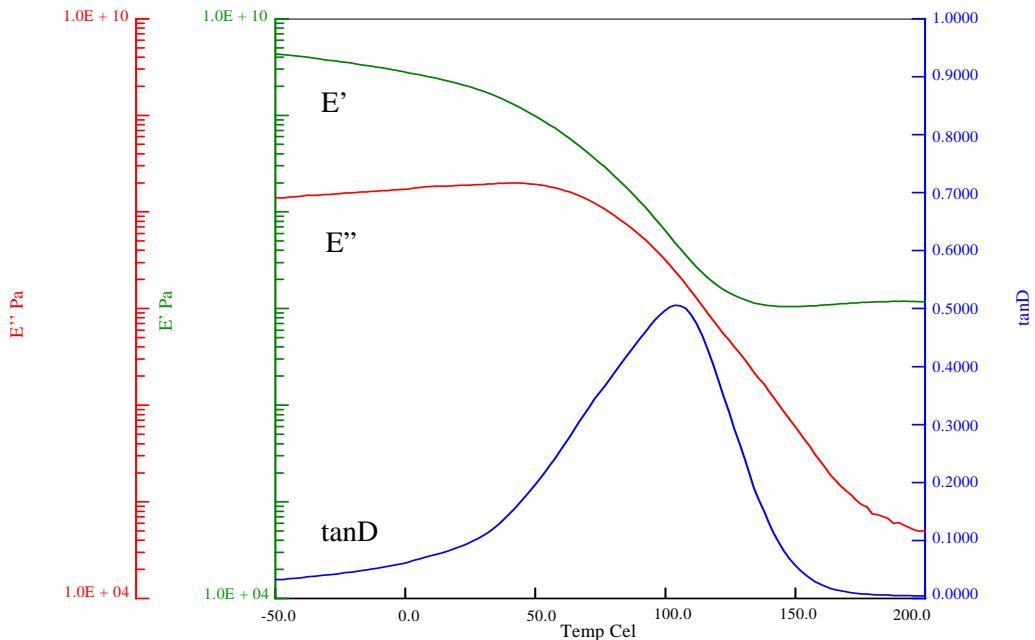


Fig.3 Results of DMA measurement of TB3094

Table 6 DMA properties of TB3094

Item	Unit	Result	Test method	Remarks
Storage modulus (E')	Pa	2.3×10^9	3TS-4730-001	25°C 1Hz
Loss modulus (E'')	°C	42		Peak value 1Hz
Loss tangent (tanD)		104		Peak value 1Hz

Curing conditions: High-pressure mercury lamp, Dominant wavelength: 365 nm, Irradiation distance: 15 cm, UV dose: $30 \text{ kJ/m}^2 \times 2$

6. Usage

- (1) Use a solvent to remove moisture, oil and contaminants from the surface to be sealed.
- (2) For other information regarding application and curing of the resin, consult our sales engineers.

7. Directions for use

- (1) Do not inhale or ingest. Harmful to health. Do not inhale or ingest.
- (2) Harmful to the health. Do not directly touch nor inhale vapor.
- (3) Wear appropriate protective equipment, such as a mask, goggles and gloves (impervious), and use the product in a place equipped with a local exhaust system.
- (4) Keep out of reach of children.
- (5) People who have allergies or susceptible skin should avoid handling it.
- (6) If swallowed, do not induce vomiting. Immediately rinse the mouth, and get medical attention.
- (7) If in eyes, repeatedly and sufficiently rinse with clean water, and immediately get medical attention.
- (8) If it adheres to the skin, it may cause inflammation. Immediately wipe away with cloth or paper, and wash the skin with soap and water.
- (9) If any bodily abnormality occurs, discontinue use, and get medical attention.
- (10) Before using it, sufficiently confirm whether the method of application and the purpose of use are appropriate.
- (11) Use of this product may cause substrate degradation.
The effects of the adhesive on the substrates must be confirmed by the operator in advance. Refrain from using the adhesive if any detrimental effects are observed.
- (12) The curing speed varies depending on the type of light source and irradiation distance. Sufficiently check the curing speed prior to use.
Particularly, the curing speed is greatly affected by the liquid temperature and substrate surface temperature owing to changes in temperature and humidity in the room.
- (13) Some gas can be generated during application and curing with UV light.
Forcibly ventilate the working area and the UV irradiation area.
- (14) If the product is transferred to another container, confirm whether or not there is an adverse effect on the curability prior to use.
Do not return the product left unused to the container.
- (15) For detailed hazard information of the product, see the Safety Data Sheet (SDS).

8. Storage

To prevent deterioration and contamination, seal the container tightly, and store it in an indoor dark, dry place at -5 to 25°C away from flame, heat sources and sunlight.

9. Disposal

Do not burn the product. It may generate harmful gas when burnt.
Ask specialized waste disposal services to dispose of the product.

10. Precautions

For Industrial
Use Only

(Do not use for household purposes.)

This product is developed for general industrial use. Before using this product, the user must accept the following terms:

- The technical data given herein are not guaranteed values, but examples of experimental values obtained by our specified test methods. We do not guarantee that the uses described herein do not conflict with any intellectual property right.
- Before using this product, confirm the appropriateness and safety of the use for the application in question, and bear all responsibilities and risks involved in the use. Never embed or inject into bodies nor use as a medical implant that may be left in the body.
- We are not liable for personal injury or property damage caused by improper handling of this product. If the properties or usage of the product to be used are unclear, never use it.
- For detailed safety information of the product, see the Safety Data Sheets (SDS). To obtain the SDS, contact our sales office or customer service center.
- Information in this document is subject to change at our own discretion.

11. Registered trademark

ThreeBond is a trademark or a registered trademark of ThreeBond Co., Ltd.